

Customer Information Sheet

(File with Owner's Manual)

Revised gear shift pattern by selecting "S" mode 6th gear as detailed below.

The following procedure must be conducted each time the vehicle is started [ignition switch "ON"] to activate revised gear shift pattern

1. Start engine.
2. Ensure electrically control transmission (ECT) switch is set to "Normal Mode".
3. Shift gear lever to "S" mode and operate lever +(up) twice until "S-6" appears in multi-information display
or alternatively;
Shift gear lever to "S" mode and hold lever +(up) position until "S-6" appears in multi-information display.

Note:



1. The above can also be performed while driving – refer operation map below.
2. Shifting gear lever from "D" range to "S" mode will initially automatically selects "S-4" or "S-5" depending on vehicle speed.

Operation Map

Move the Shift lever +(up) twice

or,

By holding the transmission shift lever in the "up" or "+" position the highest indicated gear is selected.

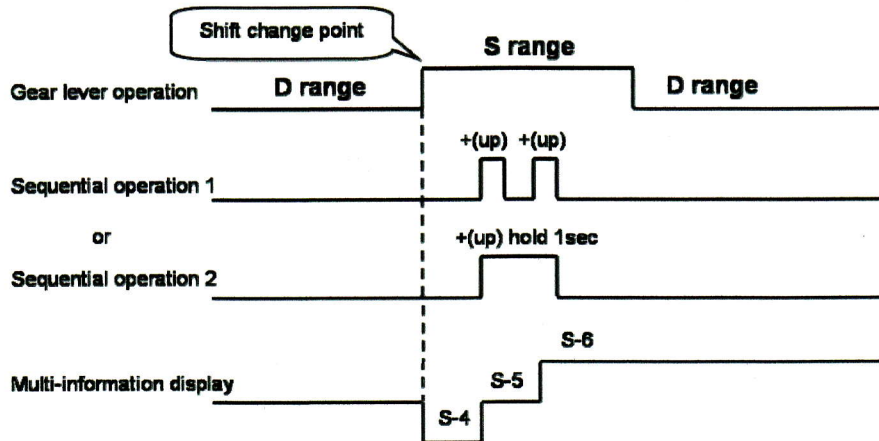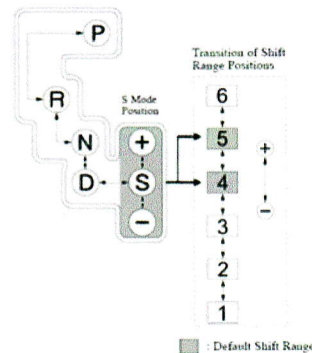

Note:

1. Once position "6" appears in the multi-information display in "S" mode, the transmission automatically selects gears 1 – 6, according to the vehicle speed and driving conditions (similar to "D" range and ECT mode normal).
2. If "D" range is selected after "S" mode with earlier 6th gear engagement settings, the lower 6th gear shift points will be maintained.
3. To disengage the revised shift pattern, the ignition must be switched off and the engine restarted.